

Menu

MENU
DISTANCE RUN DISPLAY
 DEMO
 SYSTEM MENU
 SYSTEM MENU2


DISTANCE RUN DISPLAY
 DATA DISPLAY _____
CONTACT CLOSURE
 RESET OFF
 SET _____
 0.00nm
 ENT : SET

DEMO
 SPEED _____
+10.0 kt
 DATA DISPLAY OFF
 ENT: SET

SYSTEM MENU
 SHIP SPEED AVG **15 SEC**
 SPEED OFFSET +0.0%
 TRACK DEPTH 2.0 m
 XDR OFFSET +000
 SPD DATA SELECT _____
 DOPPLER
 ENT: SET

SYSTEM MENU2
TEST
 DIMMER INTERNAL
 ゲンゴ/LANG. ENGLISH
 ENT: SET

- Select display method.
- Reset distance run.
- Set distance run value.
- Set speed to use.
- Turn demo display on/off.
- Set speed averaging interval.
- Apply offset to speed value.
- Set tracking depth.
- Set transducer offset (for installer).
- Select speed source.
- Test equipment.
- Select internal or external dimmer control.
- Select language.

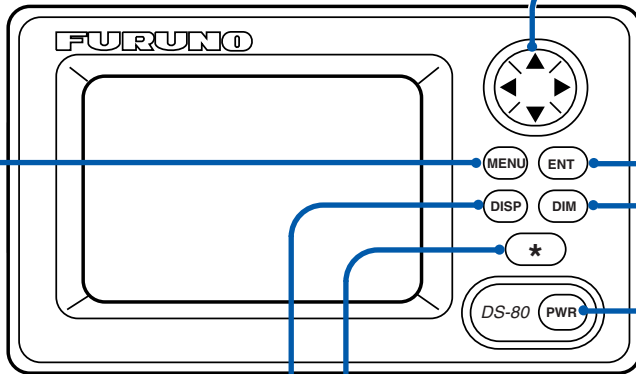

Omnipad

Select item, option on menus.

ENT key

Confirm menu setting.


Adjust dimmer



Power On/Off

PWR Turn power on/off.

Select display

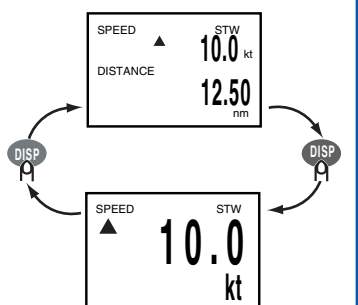

Adjust LCD contrast

